

## Features

- · High density and better linear effect for high brightness and high efficacy up to 100lm/W
- PCB width narrow to 4mm[0.16in] with great flexibility, easy mounted in curved surface
- Enhanced reliability due to stronger LED bracket.
- 29.4mm[1.16in] cuttable to satisfy different requirement
- Long lifespan with great lumen maintenance
- Excellent weather resistance and UV resistance



Bending radius: Rmin=20mm

### Application 7

• Light guide plate and other lighting.

### Installation

• Fix by 3M self adhesive tape

**PAGE** 01

+86-28-8148 001186-28-8148 1258

sales@blueviewled.com

Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone,chengdu,Sichuan,china. ZIP:610207 Web.: www.blueviewled.com



## Optical & Electrical Parameters

Model No.	Light Color	Color Temperature(K)	Beam Angle	Ra	Typical Luminous Flux(Im/m)	Efficacy (Im/w)	Voltage (DC V)	Power (W/m)
	W	2700	120	90+	1052	86	24	12.24
MN2110-238-24	W	3000	120	90+	1077	88	24	12.24
	W	4000	120	90+	1126	92	24	12.24
	W	5000	120	90+	1187	97	24	12.24
	W	6000	120	90+	1224	100	24	12.24
MN2110-300-12	W	2700	120	90+	472	79	12	6
	W	3000	120	90+	487	81	12	6
	W	4000	120	90+	500	84	12	6
	W	5000	120	90+	517	86	12	6
	W	6000	120	90+	539	90	12	6

### Other Parameters

Model No.	LED Quantity (pcs/m)	Standard Packing Length L*W(mm)	Max Run (Single Feed)(m)	Min Cuttable length(mm)	Working Temperature	Storage Temperature
MN2110-238-24	238	5000*4	2.0	29.4	-20~+60	-20~+70
MN2110-300-12	300	5000*4	1.0	10	-20~+60	-20~+70

#### NOTE:


• Test environment temperature : 25±2°C.

- The above data is typical values. The actual data of each single product may differ from the typical values. The data is subject to change without notice.
- The luminous flux is tested with single light on.
- Different color temperature will make luminous flux different.
- The working temperature here is the range with the heat dissipation of the aluminum track; for bare board, it is -20~50 °C.




## STRIP LIGHT



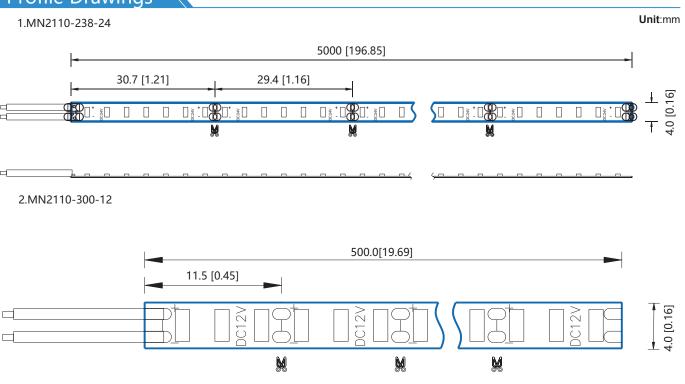

Note: Feel free to contact your sales for detailed drawings.

#### Luminous Intensity Distribution Diagram

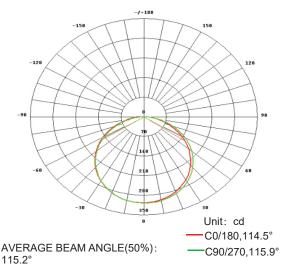

#### Average Illumination



#### Note:

the above two figures are tested with the sample MN-2210-238-24 normally on at color temperature 3000K. Welcome to contact with the sales for more product info.

**PAGE** 03

Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone,chengdu,Sichuan,china. ZIP:610207 Web.: www.blueviewled.com




# **Blueview**<sup>®</sup>


#### packing




Label the reel;

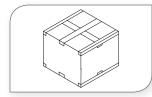


Seal the carton box;

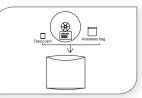


Put reel, accessory bag and desiccant together into static shielding bag;

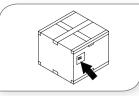

Label the box;

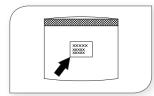

Seal and label the static shielding bag;

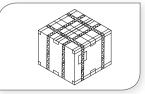

Use packing belt to pack. Add edge protectors if necessary.



Put the packed static shielding bag into carton box;

#### **Packaging information**

Model No.	Product Size L*W(mm)	Carton Size(mm)	Meter/Reel	Reel/Carton	Net Weight(kg)	Gross Weight(kg)
MN2110-238-24	5000*4	550*400*340	5	140	6.35 <b>(</b> 1±10% <b>)</b>	10.55 <b>(</b> 1±10% <b>)</b>
MN2110-300-12	5000*4	550*400*340	5	140	6.05 <b>(</b> 1±10% <b>)</b>	10.25(1±10%)
	-				I	

------


Note:

• Five meters per reel, packed in the static shielding bag.

• The above quantity and weight are only for the illustrated packaging method. There will be differences in the quantity and weight with other packaging methods.

## Installation

#### **1.Products and Tools**

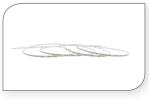



MN-2110





Self-tapping screw



Insulation Tape

**PAGE** 04

+86-28-8148 0011
86-28-8148 1258
sales@blueviewled.com

Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone,chengdu,Sichuan,china. ZIP:610207 Web.: www.blueviewled.com









Electric iron




**Diagonal pliers** 



Electric drill

2.Installation Methods and Steps

Aluminum channel installation

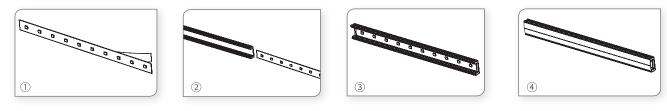


1. Peel away the self adhesive tape on the back of strip.

.....

- 2. Cut off the excess part based on the installation position.
- 3. Evenly arrange the strips with appropriate space in the track.
- 4. Install the cover and end cap.

Covered channel installation

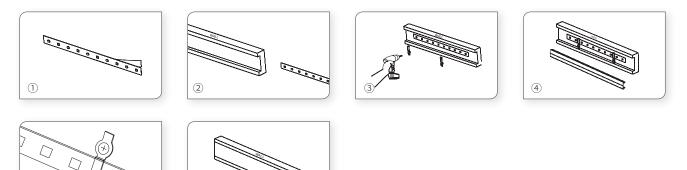

0

- Peel away the self adhesive tape on the back of strip.
   Cut off the excess part based on the installation position.
- Evenly arrange the strips with appropriate space in the track and fix them with clips.
   Install the cover and end cap.

6

- 5. Clip installation as the figure show
- 6. Finished

(5)

**PAGE** 05

+86-28-8148 0011 86-28-8148 1258

sales@blueviewled.com

Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone, chengdu, Sichuan, china. ZIP:610207 Web.: www.blueviewled.com

## STRIP LIGHT

# Blueview<sup>®</sup>

#### Attentions

- Before installation, check that the product parameters are consistent with the requirements (Seeing product specifications or product labels)
- Load voltage, current, power and power supply should be matched with the product.
- Follow the instructions of wiring diagram (first connect the product and then the power supply) to avoid short circuit.
- Make sure the correct connection of positive and negative poles between the product and power supply. Otherwise, the light will not be on.
- Make sure the power cord firmly screwed into the terminal and it should not be pulled out by hands.
- The terminal should have insulation,waterproof and anti-corrosive treatment.
- If the working length exceeded the max run length, make sure to have extra power supply.
- If it needs higher current of a LED, make sure having extra cooling.

## **Common Faults and Troubleshoot**

Quick Guide					
Reasons	Solutions				
No electric supply.	Fix the short circuit problem.				
Automatic power protection from the open or short circuit in output of the power supply.	- Fix the short circuit problem.				
Wrong connection of power supply.					
Some switching mode power supplies are not powered.	Check the power supply system to fix it.				
Power supply line error.					
Mistaken wire connection of some of products	Correctly connection				
Power overloaded.	Replace with more powerful power				
Power supply circuit excessive consumption.	Make sure the working voltage of the product within ±5% of standard voltage, or keep balance by circuit power consumption.				
Excessive quantities in series connection of the product	Reduce the quantities of the product in series connection to meet requirement.				
Connection point fault.	Remove bad connection point.				
Switching power supply failure.	Replace a new power supply.				
Wrong Installation or use of products	Please follow the instructions				
	No electric supply.         Automatic power protection from the open or short circuit in output of the power supply.         Wrong connection of power supply.         Some switching mode power supplies are not powered.         Power supply line error.         Mistaken wire connection of some of products         Power overloaded.         Power supply circuit excessive consumption.         Excessive quantities in series connection of the product         Connection point fault.         Switching power supply failure.				



+86-28-8148 0011
86-28-8148 1258
sales@blueviewled.com

Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone,chengdu,Sichuan,china. ZIP:610207 Web.: www.blueviewled.com

## STRIP LIGHT

# Blueview<sup>®</sup>

#### Warning

- Do not disassemble or retrofit the light. Do not touch the surface of the light with a sharp object.
- Do not do live-line working during installation, especially for high voltage product.
- Do not use any organic chemical solvents.
- Use neutral glass adhesive to fix this product and it needs to be dried 4 hours in the open environment after operation.
- Treat the ends and the circuit connection points that are not connected to the main line with insulation, waterproof, and anti-corrosion in the installation.
- Use 18AWG (0.75mm2 cross-sectional area) or thicker core wire to avoid adverse consequences caused by overheating, if the power cable need to lengthen.
- Make sure the input voltage meets the requirements and lines are connected correctly before lighting on.
- Series connection within the max run.
- The length of the power cable between the power supply and the led strip should not exceed 2 meters. Otherwise, large circuit loss will lead to inconsistent brightness.
- Installation, maintenance and repair should be operated by a qualified technician.

### Statements and Recycling

Statements:

- Repair should be operated by a qualified technician, if the external circuit or main line of this product is damaged.
- The parameters given in this manual are typical values and for reference only.
- All illustrations and drawings in this manual are for reference.
- This product is subject to change without notice.

#### **Recycling:**

• LED lighting products belongs to electronic products, please do recycling treatment according to the relevant WEEE directives.

------



Add:No.1000,Section 2,2nd Konggang Road,Southwest Aviation Industrial Development Aone,chengdu,Sichuan,china. ZIP:610207 Web.: www.blueviewled.com